 





OPERATOR'S MANUAL

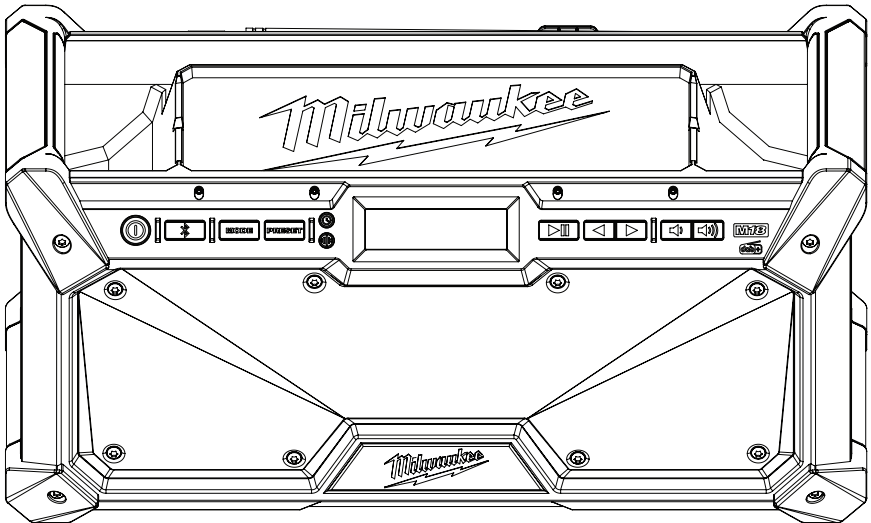

Cat. No.
M18 JSRDAB2

M18™ BLUETOOTH® JOBSITE RADIO

 **WARNING**

 To reduce the risk of injury, user must read and understand operator's manual.

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING **READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS.** Failure to heed all warnings listed below, may result in electric shock, fire and/or serious personal injury. **KEEP THESE INSTRUCTIONS.**

 
- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Do not use this appliance near water.
- Clean only with dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other appliance (including amplifiers that produce heat.)
- Only use attachments/accessories specified by the manufacturer.
- Unplug this appliance during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, such as power supply adaptor is damaged, liquid has been spilled or objects have fallen into the appliance, the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped.

⚠ WARNING To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

- Only connect power supply adaptor into readily accessible outlet to allow the appliance to be unplugged quickly.
- A battery operated radio with integral batteries or a separate battery pack must be recharged only with the specified charger for the battery. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- Use battery operated radio only with specifically designated battery packs. Use of any other batteries may create a risk of fire.
- When battery pack is not in use, keep it away from other metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause sparks, burns, or a fire.
- Store your battery pack in a cool, dry place. Do not store battery pack where temperatures may exceed 50°C (120°F) such as direct sunlight, a vehicle or metal building during the summer.
- Only use the supplied power supply adaptor.
- Never disassemble the radio or try to do any rewiring on the radio's electrical system.
- Do not expose this appliance to dripping and splashing liquids,, or place objects filled with liquids on this unit.

SPECIFIC SAFETY RULES

- Always use common sense and be cautious when using tools. It is not possible to anticipate every situation that could result in a dangerous outcome. Do not use this tool if you do not understand these operating instructions or you feel the work is beyond your capability; contact **MILWAUKEE®** Tool or a trained professional for additional information or training.
- Maintain labels and nameplates. These carry important information. If unreadable or missing, contact a **MILWAUKEE®** service facility for a replacement.

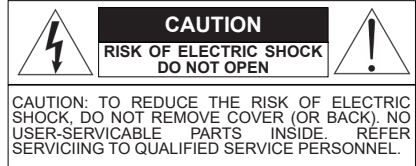

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

READ AND SAVE ALL INSTRUCTIONS FOR FUTURE USE.

ADDITIONAL BATTERY SAFETY RULES

 
 
 
 
⚠ WARNING To reduce the risk of fire, personal injury, and product damage due to short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc., can cause a short circuit.

⚠ WARNING Do not charge non-rechargeable batteries.

AC ADAPTER

⚠ WARNING Consult your radio's operator's manual for proper use requirements. Indoor use only.

FUNCTIONAL DESCRIPTION

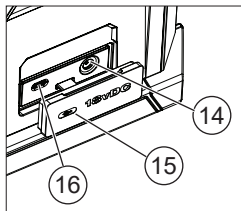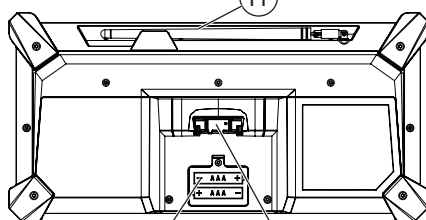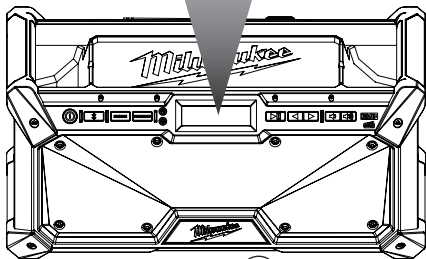

1. Power button
2. Bluetooth® button
3. MODE button
4. Preset button
5. Clock button
6. Equaliser button
7. Display
8. Play/Pause button
9. Seek/adjust buttons
10. Volume buttons
11. Antenna
12. Battery bay
13. Backup-battery compartment
14. Power adapter port
15. Port cover
16. USB-C power outlet

SPECIFICATIONS

Cat. No.	M18 JSRDAB2
Battery Type	M18™
DC Input Volts	18 V
DC Input Amps	3 A
Output Volts USB-C	5 V
Output Amps USB-C	3 A
Replacement adapter	DBS054A-1803000A
Input Volts	100 - 240 VAC 50/60 Hz
Input Amps	1.2 A
Output Volts	18 V DC
Output Amps	3 A
Recommended Ambient Operating Temperature	-10°C to 40°C (14°F to 104°F)

SYMBOLGY



Volts



Alternating Current



Amps



Hertz



Read operator's manual



Presence of important operating instructions.



CAUTION Risk of electric shock.



Double insulated



Indoor use only



Class III protection



Switch mode power supply unit



IP rating



Rated maximum ambient temperature



Short-circuit-proof safety isolating transformer



Efficiency level



DC connector polarity



Regulatory Compliance Mark (RCM). This product meets applicable regulatory requirements.



Do not dispose of electric tools together with household waste material. Electric tools and electronic equipment that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.

ASSEMBLY

⚠WARNING Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

Inserting/Removing the Battery

To insert the battery, slide the pack into the body of the tool. Make sure it latches securely into place.

⚠WARNING Only use accessories specifically recommended for this tool.

Others may be hazardous.


To remove the battery, push in the release buttons and pull the battery pack away from the tool.

⚠WARNING Always remove the battery pack any time the tool is not in use.

Power

The MILWAUKEE® jobsite radio can be powered by MILWAUKEE® M18™ Li-Ion battery packs or provided adapter. When plugged into a wall outlet, the battery bay will not charge MILWAUKEE® M18™ Li-Ion battery packs.

Low Battery Indicator

When the radio is powered by a battery pack and its charge falls below 10%, the low battery indicator  is displayed.

USB-C Power Outlet

This outlet can be used to charge a USB device that uses less than 3 A of DC electrical current. The USB-C outlet will supply power when the battery pack is inserted and the radio is ON, or anytime the radio is being powered by the wall adapter.

NOTE: Any device that uses more than 3 A of DC electrical current will trip a self-resetting function and disable the output.

Changing Back-up Batteries

⚠WARNING Batteries may leak chemicals or may explode if used incorrectly.

The following care should be taken to prevent such an incident:

- Make sure the positive (+) and negative (-) battery terminals are positioned correctly.
- Do not mix new and old batteries together, or mix different types of batteries.
- Do not try to recharge non-rechargeable batteries.
- If chemicals from the batteries come in contact with your skin, wash them off immediately with water. If chemicals leak onto the radio, clean the radio completely.

To hold clock time when the battery pack is removed, 2 AAA batteries are required.

1. Remove battery pack and unplug radio.
2. Remove the screw and battery cover.
3. Insert two (2) AAA batteries according to matching positive (+) and negative (-) marks.
4. Replace the battery cover and screw.

OPERATION

⚠WARNING To reduce the risk of fire or electric shock, do not expose this radio to rain or moisture.

① Turning On/Off and Controlling Volume

Plug the cord into an appropriate AC outlet or install a battery pack.

Press the power button **①** to turn the radio on and off. The last accessed mode will be shown. To display the time, press the CLOCK button. Volume is restored to the last setting.

NOTE: When the radio is running on battery power, the display will dim after 5 minutes to reduce power use.

Press the volume buttons to increase or decrease the volume.

Setting the Clock

1. Press and hold the Clock button.
2. The Clock Synchro. menu will be shown. The clock can be set automatically through radio stations if it is available. To enable the Clock Synchro function, select ENABLE by pressing either of the SEEK/ADJUST buttons and ensuring the arrow is pointing to ENABLE.
3. To manually set the clock, press and hold the CLOCK button; when the Clock Synchro menu is shown, press the CLOCK button again; the hour will flash; use the SEEK/ADJUST buttons to change the hour and select the correct number; press the CLOCK button again to select the minute; press the SEEK/ADJUST buttons to select the correct number for minutes.
4. Press the CLOCK button again to save the new time setting.

Equaliser Adjustment

To manually adjust the Bass/Treble sound, press the Equaliser button. Set the bass sound by using the VOLUME buttons. Press the Equaliser button again to set the treble sound by using the VOLUME buttons.

Selecting Radio Function

For MODE Functions

Push the MODE button to select DAB, FM or AM (in that order).

Tuning (Seeking and Scanning)

Press and hold one of the **◀▶** buttons to SEEK through the band. When a station is found, the SEEK will stop. Press the **◀▶** buttons to SCAN through the stations, pausing at each.

PRESET Stations

To set the PRESET stations:

1. Tune to desired station.
2. Press and hold the PRESET button until the Menu is shown.
3. Use the **◀▶** buttons to select the STORE TO PRESET option and then press the PRESET button again; The most recently accessed Preset station will be shown even if there is already a station stored in that location. Nine locations (1-9) are available.
4. Press the **▶** to cycle to the desired PRESET option and press the PRESET button again; station will be stored in the selected location.

For DAB Radio Function

1. Press MODE to select DAB function
2. Press and hold PRESET to access menu
3. Press ◀▶ to cycle through MENU.
4. Select AUTOSCAN to scan for local DAB stations; press PRESET to activate scan.
5. Once scan is complete the first DAB station will be active.
6. To cycle through other DAB stations press ◀▶; stop cycling when desired station reached.
7. Preset stations the same way as for AM/FM option above.

✂ Using Bluetooth®

To enter the Bluetooth® mode, press the ✂ button.

Pairing

- If no Bluetooth® device is connected, Bluetooth® pairing will begin automatically and the ✂ icon will flash on the display.
- The radio will continue to search for a signal for 3 minutes.
- To manually pair a device, press and hold the Bluetooth® button until the ✂ begins to flash.
- While the ✂ is flashing, select "M18 Jobsite Radio" on the Bluetooth® capable device.
- Once the device has successfully paired with the radio, a tone will play and the ✂ icon will be no longer flashing on the radio's display and the name of the connected device will be shown.

Connecting

To enter the Bluetooth® mode, press the ✂ button. When the radio locates a paired Bluetooth® device, the ✂ will be shown on the radio's display and the name of the connected device will be shown on the screen with the word "Connected". If connection is lost between the radio and the Bluetooth® device, the radio will try to reconnect automatically for up to 3 minutes.

Controlling

When streaming music through to the radio via a Bluetooth® device, use the ▶|| button to start and play or pause the music. Use the ◀▶ buttons to move through the tracks.

Menu options

Long pressing the PRESET button will access the specific menu options for the radio's current function. The menu options will differ slightly between the different functions.

Auto Scan (DAB only)

Auto scan for accessible DAB stations in the current location.

Manual Tune (DAB Only)

Manual tune DAB stations. If no station is located on the selected frequency, the previously accessed station will be selected

Display Type (DAB only)

Select between the following 4 options to be displayed on the screen while in DAB mode:

1. Frequency
2. Signal Strength
3. Program Type
4. Dynamic Label

Store To Preset (AM, FM and DAB only)

Select to store stations in the PRESET locations (see PRESET Stations section above).

RESET All

Select to reset settings to original factory settings.

FW Version

Displays the currently installed Firmware Version number.

MAINTENANCE

⚠WARNING To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the battery pack, charger, or tool, except as provided in these instructions. Contact a MILWAUKEE® service facility for all other repairs.

Maintaining Tool

Keep your tool, battery pack and charger in good repair by adopting a regular maintenance program. Inspect your tool for issues such as undue noise, misalignment or binding of moving parts, breakage of parts, or any other condition that may affect the tool operation.

If the tool does not start or operate at full power with a fully charged battery pack, clean the contacts on the battery pack. If the tool still does not work properly, return the tool, charger and battery pack, to a MILWAUKEE® service facility for repairs.

Cleaning

Clean dust and debris from vents. Keep handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean, since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include petrol, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.

Repairs

For repairs, return the tool, battery pack and charger to the nearest service centre.

ACCESSORIES

⚠WARNING Use only recommended accessories. Others may be hazardous.

For a complete listing of accessories, go online to milwaukeetool.com.au / milwaukeetool.co.nz or contact a distributor.

WARRANTY - AUSTRALIA and NEW ZEALAND

Please refer to Australian and New Zealand warranty supplied with tool. This warranty applies only to product sold by authorised dealers in Australia and New Zealand.

SERVICE - AUSTRALIA and NEW ZEALAND

MILWAUKEE® prides itself in producing a premium quality product that is Nothing But Heavy Duty™. Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact your authorised MILWAUKEE® dealer.

For a list of MILWAUKEE® dealers, guarantee or service agents please contact MILWAUKEE® Customer Service or visit our website.

(Australia Toll Free Telephone Number 1300 645 928)

(New Zealand Toll Free Telephone Number 0800 645 928)

or visit milwaukeetool.com.au/milwaukeetool.co.nz.

Milwaukee Electric Tool Corporation

13135 West Lisbon Road, Brookfield, Wisconsin U.S.A. 53005

Milwaukee Tool (Australia)

26 - 40 Nina Link, Dandenong South,
Victoria, 3175, Australia

Milwaukee Tool (New Zealand)

274 Church Street, Penrose,
Auckland, 1061, New Zealand

DESIGNED BY MILWAUKEE ELECTRIC TOOL CORP.

PROFESSIONALLY MADE IN CHINA

PRINTED IN CHINA